



Flex-Sill Door Flashing Install Guide

1. Measure rough opening width (A) and desired vertical return height (B) for each side.
2. Add all three measurements together to determine the length of Flex-Sill to be cut.

$$(A) + (B) + (B) = \text{FLEX-SILL LENGTH}$$

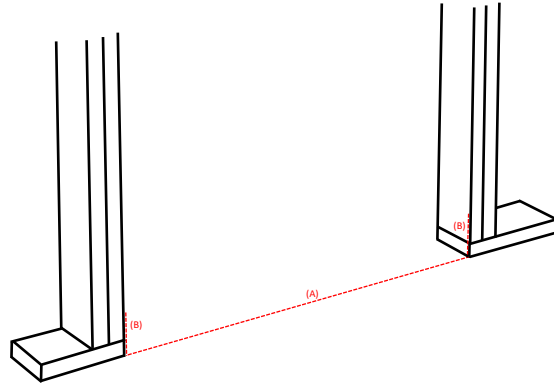


3. Make relief cuts on each end of Flex-Sill using (B) measurement. This will allow Flex-Sill to bend at each corner of the rough opening.

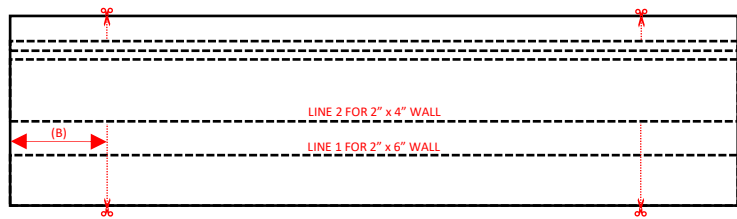

NOTE:

- Cut to line 1 for 2" x 6" sill
- Cut to line 2 for 2" x 4" sill


4. Fold along creased lines to form Flex-Sill.

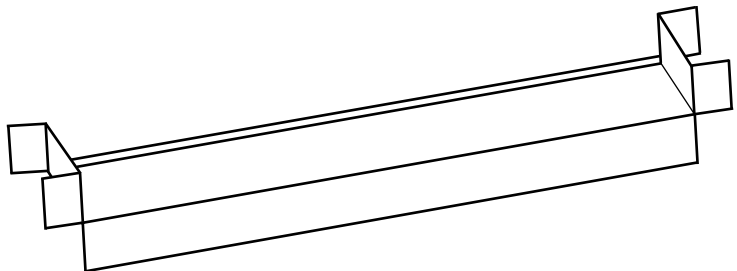

5. Install Flex-Sill pre-formed corners on each side of rough opening.

NOTE:

Corners may be taped or stapled in place


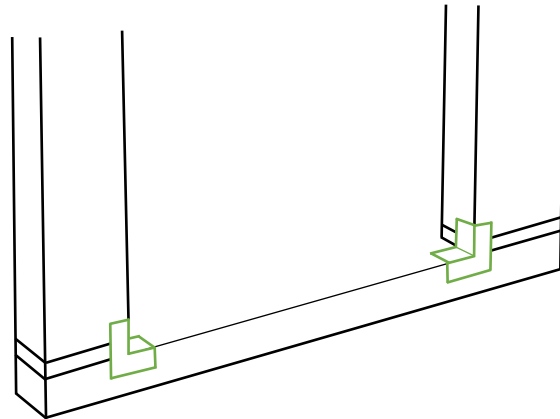


6. Install Flex-Sill into rough opening

7. Tape top of Flex-Sill on each side

NOTE:

Front corners may be taped
(see below detail)

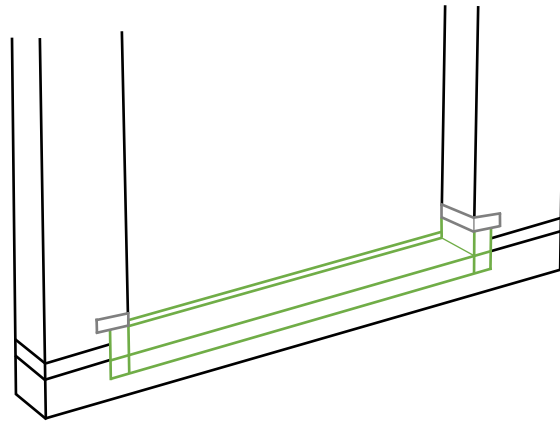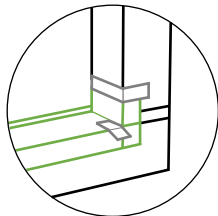

Flex-Sill for Doors
Model # FSD-46

Flex-Sill Corners
Model # FSC-3

